

Cobalt HVLP

Siphon/Pressure Feed Spray Gun

SHARPE

THE SPRAY GUN PEOPLE

FOR PRODUCT INFORMATION CALL:

1-800-742-7731



Important Safety Instructions

Read all warnings and instructions in this manual.
Save these instructions.

Maximum Air and Fluid Inlet Pressure: 100 psi (0.7 MPa, 7 bar)

Maximum HVLP Compliant Air Pressure:

Part No. 5860, 5862, 5863, 5864, 5865 - 50 psi (345 kPa, 3.4 bar)

Part No. 5866 - 40 psi (276 kPa, 2.8 bar)








SHARPE MANUFACTURING COMPANY • P.O. BOX 1441, MINNEAPOLIS, MN 55440-1441

1-800-742-7731, www.sharpe1.com

310799B, 4/2006

 **WARNING**

	<p>FIRE AND EXPLOSION HAZARD</p> <p>Flammable fumes, such as solvent and paint fumes, in work area can ignite or explode. To help prevent fire and explosion:</p> <ul style="list-style-type: none"> • Use equipment only in well ventilated area. • Eliminate all ignition sources; such as pilot lights, cigarettes, portable electric lamps, and plastic drop cloths (potential static arc). • Keep work area free of debris, including solvent, rags and gasoline. • Do not plug or unplug power cords or turn lights on or off when flammable fumes are present. • Ground equipment and conductive objects in work area. • If there is static sparking or you feel a shock, stop operation immediately. Do not use equipment until you identify and correct the problem.
	<p>EQUIPMENT MISUSE HAZARD</p> <p>Misuse can cause death or serious injury.</p> <ul style="list-style-type: none"> • Do not exceed the maximum working pressure or temperature rating of the lowest rated system component. See Technical Data in all equipment manuals. • Use fluids and solvents that are compatible with equipment wetted parts. See Technical Data in all equipment manuals. Read fluid and solvent manufacturer's warnings. • Check equipment daily. Repair or replace worn or damaged parts immediately. • Do not alter or modify equipment. • Use equipment only for its intended purpose. Call your Graco distributor for information. • Route hoses and cables away from traffic areas, sharp edges, moving parts, and hot surfaces. • Do not use hoses to pull equipment. • Keep children and animals away from work area. • Comply with all applicable safety regulations.
	<p>TOXIC FLUID OR FUMES HAZARD</p> <p>Toxic fluids or fumes can cause serious injury or death if splashed in the eyes or on skin, inhaled, or swallowed.</p> <ul style="list-style-type: none"> • Read MSDS's to know the specific hazards of the fluids you are using. • Store hazardous fluid in approved containers, and dispose of it according to applicable guidelines.
	<p>PERSONAL PROTECTIVE EQUIPMENT</p> <p>You must wear appropriate protective equipment when operating, servicing, or when in the operating area of the equipment to help protect you from serious injury, including eye injury, inhalation of toxic fumes, burns, and hearing loss. This equipment includes but is not limited to:</p> <ul style="list-style-type: none"> • Protective eyewear • Clothing and respirator as recommended by the fluid and solvent manufacturer • Gloves • Hearing protection
	<p>PRESSURIZED EQUIPMENT HAZARD</p> <p>Fluid from the gun/dispense valve, leaks, or ruptured components can splash in the eyes or on skin and cause serious injury.</p> <ul style="list-style-type: none"> • Follow Pressure Relief Procedure in this manual, when you stop spraying and before cleaning, checking, or servicing equipment. • Tighten all fluid connections before operating the equipment. • Check hoses, tubes, and couplings daily. Replace worn or damaged parts immediately.

2 Year Limited Warranty

Sharpe warrants this product to the original user against defective material or workmanship for a period of 1 year from the date of purchase.

Sharpe reserves the right to determine whether the part or parts failed because of defective material, workmanship, or other causes. Failures caused by accident, alteration, or misuse are not covered by this warranty.

Sharpe, at its discretion, will repair or replace products covered under this warranty free of charge. Repairs or replacements of products covered under this warranty are warranted for the remainder of the original warranty period.

Sharpe or its authorized service representatives must perform all warranty repairs. Any repair to the product by unauthorized service representatives voids this warranty. The rights under this warranty are limited to the original user and may not be transferred to subsequent owners.

This warranty is in lieu of all other warranties, expressed or implied, including warranties of merchantability and fitness for a particular purpose. Some states do not allow the exclusion or limitations of incidental or consequential damages, so the above limitations may not apply to you.

COBALT HVLP SIPHON/PRESSURE FEED SPRAY GUN

Setup

- Check that your shop air provides adequate air flow.
 - Use a minimum 3/8 in. ID air supply hose.
 - Set shop air pressure regulator (not supplied) according to paint manufacturer's recommendation for. See maximum pressures and compliant air pressures on cover.
 - Make sure no air restrictions, such as low-volume cheater-valves, obstruct the air flow. If an air adjusting valve is desired, use a SHARPE Air Adjusting Valve 24AAV (part no. 2210), 36AAV-HOV (part no. 3310) or HOV (part no. U04410).
 - Install a shutoff valve (not supplied) downstream of the air regulator to shut off gun air.
 - Install an inline air filter (not supplied) to clean and dry the air supply to the gun.
1. Shut off air supply.
 2. Connect a clean, dry, filtered air supply to the gun air inlet (9). See FIG. 1, page 4.
 3. If this is first time using the equipment, flush the spray gun.

Operation

Pressure Relief Procedure

WARNING



Follow **Pressure Relief Procedure** when you stop spraying and before cleaning, checking, or servicing equipment. Read warnings, page 2.

1. Turn off gun air supply.
2. Trigger the gun to relieve pressure.

Flushing

WARNING



Read warnings, page 2.

Flush before using the equipment, before changing colors, and when you are done spraying. Use solvent that is compatible with gun wetted parts and fluid that will be sprayed. Flush at lowest possible pressure.



Refer to **Compliant Cleaning Methods**, page 4, to comply with air quality laws if applicable.

1. Follow **Pressure Relief Procedure**.
2. Dispose of any paint in cup.
3. Fill cup with small amount of solvent.
4. Spray into grounded metal waste container until equipment is clean.
5. Follow **Pressure Relief Procedure**.

Spraying

CAUTION

Excessive atomizing air pressure can increase over-spray, reduce transfer efficiency, result in a poor quality finish from dry spray.

Regulatory agencies in certain states prohibit the operation of a spray gun above 10 psi (69 kPa, .7 bar) atomizing air cap pressure.

1. Fill cup with material and connect to gun fluid inlet (37) or connect fluid supply hose if pressure feeding gun. See FIG. 1, page 4.
2. Turn on shop air to gun and set atomizing pressure with the gun fully triggered.
3. Adjust the pattern size and shape with the spray width adjustment knob (17). Turn knob clockwise to reduce pattern size and counterclockwise to increase it.



See **Troubleshooting** guide if you experience an irregular pattern.

4. Fluid control knob (15) is factory set for maximum needle trigger travel and material flow. To decrease needle/trigger travel and decrease fluid flow, turn the knob clockwise.

COBALT HVLP SIPHON/PRESSURE FEED SPRAY GUN

Cleaning and Maintenance

WARNING



Follow **Pressure Relief Procedure** when you stop spraying and before cleaning, checking, or servicing equipment. Read warnings, page 2.

CAUTION

- Do not submerge gun in solvent. Solvent dissolves lubricant, dries out packings, and may clog air passages.
- Do not use metal tools to clean air cap holes as this may scratch them and distort the spray pattern.
- Use a compatible solvent.
- Gun can be cleaned in a gun washer.



Clean air line filters as directed by the manufacturer.

Volatile Organic Compounds (VOC) Regulation

In certain states, spraying solvents that release VOC's into the atmosphere when cleaning a spray gun is prohibited. To comply with these air quality laws you must use a cleaning method that prevents the escape of VOC vapors into the atmosphere. See **Compliant Cleaning Methods** below.

Compliant Cleaning Methods

- Place spray gun in a gun washer that completely encloses the gun and components during cleaning, rinsing, and draining.
- Spray solvent through the spray gun into a closed gun cleaning station.

Cleaning Gun and Cup



Refer to **Compliant Cleaning Methods** to comply with air quality laws if applicable.


1. Follow **Flushing** procedure, page 3.
2. Use a rag moistened in solvent to wipe cup lid, fluid tube, inside of cup, and outside of gun.
3. Blow dry gun inside and out. Lubricate gun - see **Spray Gun Maintenance**.

Cleaning Nozzle and Air Cap

CAUTION

- Trigger gun and use nozzle removal tool 41160 whenever you tighten or remove nozzle to avoid damaging needle seat and nozzle.
- Do not use metal tools to clean air cap holes as this may scratch them and distort the spray pattern.

To clean the air cap and nozzle, remove and soak them in a compatible cleaning solution. Clean them and front of gun with a soft-bristle brush dipped into compatible solvent. Do not use a wire brush or metal tools. To clean out air cap holes, use a soft implement, such as a toothpick.

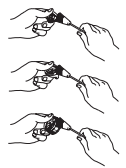

Spray Gun Maintenance

- Frequently lubricate the gun moving parts with a drop of non-silicone oil (part no. 8255).
- Do not disassemble the spray gun if you are having a spray pattern problem. Check **Troubleshooting**, page 5, for information on how to correct the problem.
- Check for fluid leakage. Tighten fittings or replace equipment as needed.

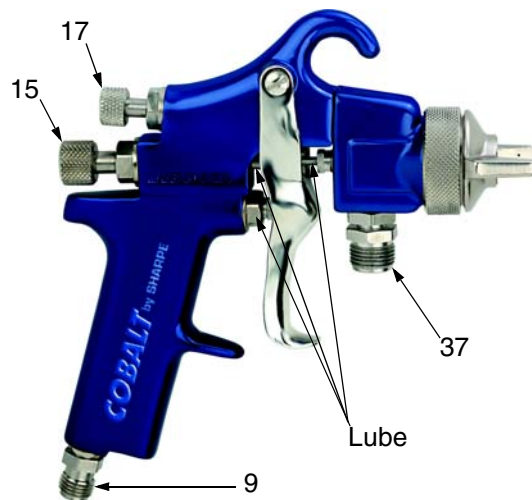


FIG. 1

Technical Data

Maximum Air Inlet Pressure: 100 psi (0.7 MPa, 7 bar)

Maximum HVLP Compliant Air Pressure: see front cover (delivers 10 psi (69 kPa, 0.7 bar) spraying pressure at air cap)

Air Consumption: 13.9 CFM at 50 psi (345 kPa, 3.4 bar)

Wetted Parts: stainless steel, carbon steel, aluminum, brass, nylon, low density polyethylene

Spray Gun

- 1/4 npsm (R1/4-19) air inlet
- 3/8 npsm (R3/8-19) fluid inlet

COBALT HVLP SIPHON/PRESSURE FEED SPRAY GUN






Troubleshooting



WARNING




Follow **Pressure Relief Procedure**, page 3, before troubleshooting or servicing. Read warnings, page 2.

Problem	Cause	Solution
 Right	Normal pattern	No action necessary
 Wrong Heavy top or bottom pattern	Dirty or damaged air cap or fluid nozzle.	Rotate air cap 180°. <i>If pattern follows air cap</i> , problem is in air cap. Clean and inspect. See page 4. If pattern is not corrected, replace air cap. <i>If pattern does not follow the air cap</i> , the problem is with the fluid nozzle. Clean and inspect the nozzle. See page 4. If the pattern is not corrected, replace nozzle.
 Wrong Split pattern	Pressure too high for viscosity of material being sprayed.	a. Reduce air pressure. b. Increase material viscosity c. Correct pattern by narrowing fan size with spray width adjustment knob.
 Wrong	Dirty or distorted air horn holes.	Rotate air cap 180°. <i>If pattern follows air cap</i> , problem is in air cap. Clean and inspect. See page 4. If pattern is not corrected, replace air cap.
Will not spray.	a. Cup is not tight b. Cup or fluid supply empty. c. Fluid adjustment knob (15) turned too far clockwise.	a. Tighten cup. b. Fill. c. Adjust knob (15) to the counterclockwise.
 Wrong Heavy pattern or orange peel	a. Fluid pressure too high for viscosity of material being sprayed. b. Air pressure too low. c. Gun held too close to surface.	a. Reduce air pressure. b. Increase fluid pressure. c. Hold gun about 6-8 inches (150-200 mm) from surface.

COBALT HVLP SIPHON/PRESSURE FEED SPRAY GUN

Parts

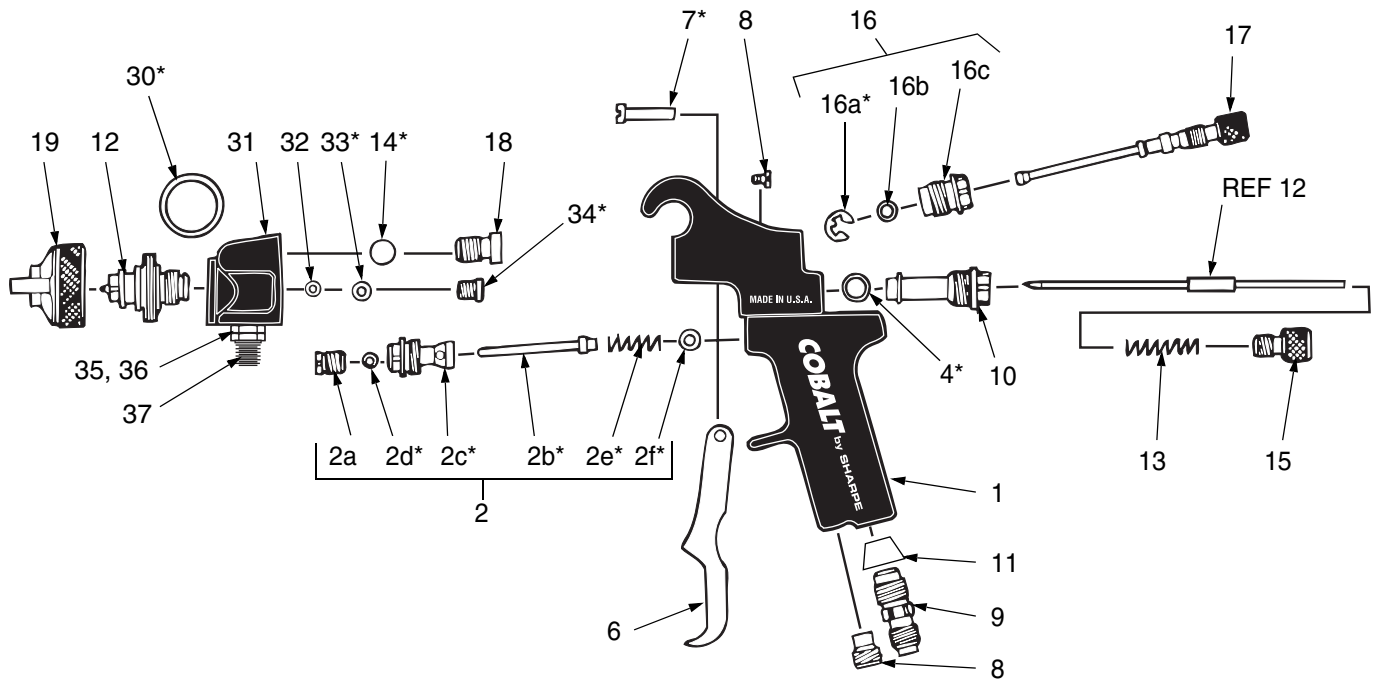

Ref. No.	Part No.	Description	Qty.	Ref. No.	Part No.	Description	Qty.
1	28156	Gun Handle, HVLP	1	31	118531	Gun Head	1
2	26016	Air Valve Assembly Includes items 2a-2f	1	32	34941	Packing	1
2a	26032	• Packing Nut	1	33*	26022	Fluid Needle Packing	1
2b*	25066	• Air Valve	1	34*	26032	Packing Nut	1
2c*	16151	• Housing	1	35	27058	Fluid Inlet Gasket	1
2d*	16162	• Packing	1	36	27076	Fluid Inlet Lock Nut	1
2e*	16167	• Air Valve Spring	1	37	26070	Fluid Inlet Fitting	1
2f*	16163	• Gasket	1				
3	10333	Trigger Screw	1				
4	16163	Gasket	1				
6	26042	Trigger	1				
7*	26044	Trigger Shaft	1				
8	26054	Pipe Plug	2				
9	26055	Air Inlet Fitting	1				
10	26056	Fluid Control Bushing	1				
11	118524	Pressure Limit Bushing	1				
12	see table	Needle/Nozzle Set	1				
13	16150	Needle Spring	1				
14*	10326	Gasket	1				
15	25092	Fluid Control Knob	1				
16	26018	Width Control Assembly Includes items 16a-16c	1				
16a*	16175	• Retaining Ring	1				
16b	38120	• O-Ring	1				
16c	26066	• Body	1				
17	26065	Control Valve/Knob	1				
18	41137	Screw	1				
19	see table	Air Cap	1				
30*	16100	Nozzle Gasket	1				

* Parts included in Repair Kit 28140.

Gun Accessory Tools

Part No. 41160: 1/2 in. Nozzle Removal Tool

Part No. 41150: Nozzle Cleaning Brush

Gun Part No.	Needle/Nozzle Size	Air Cap Part No.	Needle/Nozzle Part No.
5860	0.8 mm	27001	118533
5862	1.2 mm	27001	118534
5863	1.6 mm	27001	118535
5864	1.4 mm	27001	118536
5865	1.8 mm	27001	118537
5866	2.2 mm	27003	118538